


MONITOR 422 SERVICE PARTS LIST

MONITOR 422 SERVICE PARTS LIST

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	6200	SPILL TRAY	58	6273	OVER HEAT THERMOSTAT
2	5019	LEG	59	6260	FAN THERMOSTAT
3	6101	AIR SUPPLY HOSE (A)	60	6163	AIR PACKING SET
4	6102	AIR SUPPLY HOSE (B)	61	6139	POWER SUPPLY CORD
5	6103	FUEL PIPE	62	4833	CORD BUSHING
6	6104	FUSIBLE VALVE	63	6037	LEVEL GUIDE
7	6105	CONSTANT LEVEL VALVE	64	6138	CARRYING HANDLE
8	6106	C.L.V. STRAINER	65	6186	SENSOR ASSY
9	6189	STRAINER GASKET	66	6278	SLIDE SWITCH ASSY
10	6108	SOLENOID PUMP PACKING	67	6206	SLIDE SWITCH COVER
11	6250	SOLENOID PUMP	68	6207	SLIDE SWITCH PANEL
12	6110	OIL SUMP PIPE	69	6208	SLIDE SWITCH KNOB
13	6164	JOINT SEAL PACKING	70	6140	BLOWER ASSY
14	6111	FUEL SUMP	71	6141	BLOWER MOUTH PACKING
15	6112	GASKET (1)	72	6142	DAMPER SOLENOID ASSY
16	6182	BURNER	73	6143	SUCTION CASE
17	6113	BURNER CLOTH	74	6144	SEAL PACKING
18	6114	GASKET (2)	75	6261	BLOWER GUARD
19	6115	GASKET (3)	76	6262	CIRCULATION MOTOR
20	6277	HEATER	77	6180	FAN BLADE
21	6195	IGNITER BRACKET	78	6263	WIRING GUARD
22	6117	HEATER COVER PACKING	79	6264	WIRING HARNESS FOR FAN MOTER
23	6191	IGNITER COVER	80	4004	JOINT PIPE
24	6118	FLAME DETECTIVE PLUG	81	6209	AIR DAMPER (S)
25	6119	PLUG PACKING	82	6145	AIR SUPPLY HOSE ASSY
26	6196	FL PLUG BRACKET	83	4014	EXHAUST OUTLET CAP
27	6120	GASKET (4)	84	4016	AIR PORT O RING
28	6121	HEAT EXCHANGER ASSY	85	4006	PIPE HOLDER
29	6122	GASKET (6)	86	4008	HOSE BAND
30	6123	EXHAUST DUCT	87	4805	AIR OUTLET CAP
31	6176	O-RING (P39)	88	6147	FLUE PIPE ASSY
32	6124	WINDOW GASKET	89	6148	SLEEVE FLANGE SET
33	6125	WINDOW FRAME GASKET	90	6149	UNDER COVER
34	6068	WINDOW PLATE	91	6210	LOUVER
35	6069	WINDOW GLASS	92	6265	FRONT COVER
36	6126	WINDOW BASE GASKET	93	6266	SWITCH & LAMP ASSY
37	6127	COMBUSTION CHAMBER ASSY	94	6267	TOP COVER
38	6181	COMBUSTION RING ASSY	95	6268	LAMP PANEL
39	6128	BURNER CAP	96	6158	FUEL TANK COVER
40	6129	BAFFLE ASSY	97	6159	FUEL TANK ASSY
41	6130	CHAMBER GASKET	98	6179	FUEL TANK CAP
42	6131	CHAMBER CAP	99	6269	FLOAT SWITCH
43	6251	POWER TRANSFORMER	100	6178	FLOAT SWITCH PACKING
44	6252	PWB ASSY	101	6177	OIL FILTER
45	6134	PWB SPACER CLIP (A)	102	6162	RESISTOR
46	6135	PWB SPACER CLIP (B)	103	6270	CABINET ASSY
47	6253	MICROPROCESSOR	104	6345	UNION NUT
48	6203	BUZZER	105	6194	WALL CLAMPS
49	6172	FUSE (250V 10A)	106	6214	BASE TRAY RETAINER
50	6173	FUSE (250V 2A)	107	6197	SCREW SET FOR FLUE PIPE
51	6256	CAPACITOR(1.8 μ FD)	108	6271	CARTON BOX
52	6187	TR ARRAY (M54563P) IC4	109	6175	CUSHION SET
53	6204	PHOTO COUPLER IC12	110	1154	OWNERS GUIDE
54	6137	CORD CONNECTOR	111	8216	TOUCH-UP PAINT (WHITE)
55	6107	AIR LINE	112	8217	GLUE
56	6184	AIR PRESSURE SWITCH	113	8219	TOUCH-UP PAINT (GREY)
57	6136	RUBBER BUSH	114	6216	FUEL NOZZLE

Blower Motor Only Part # 6829

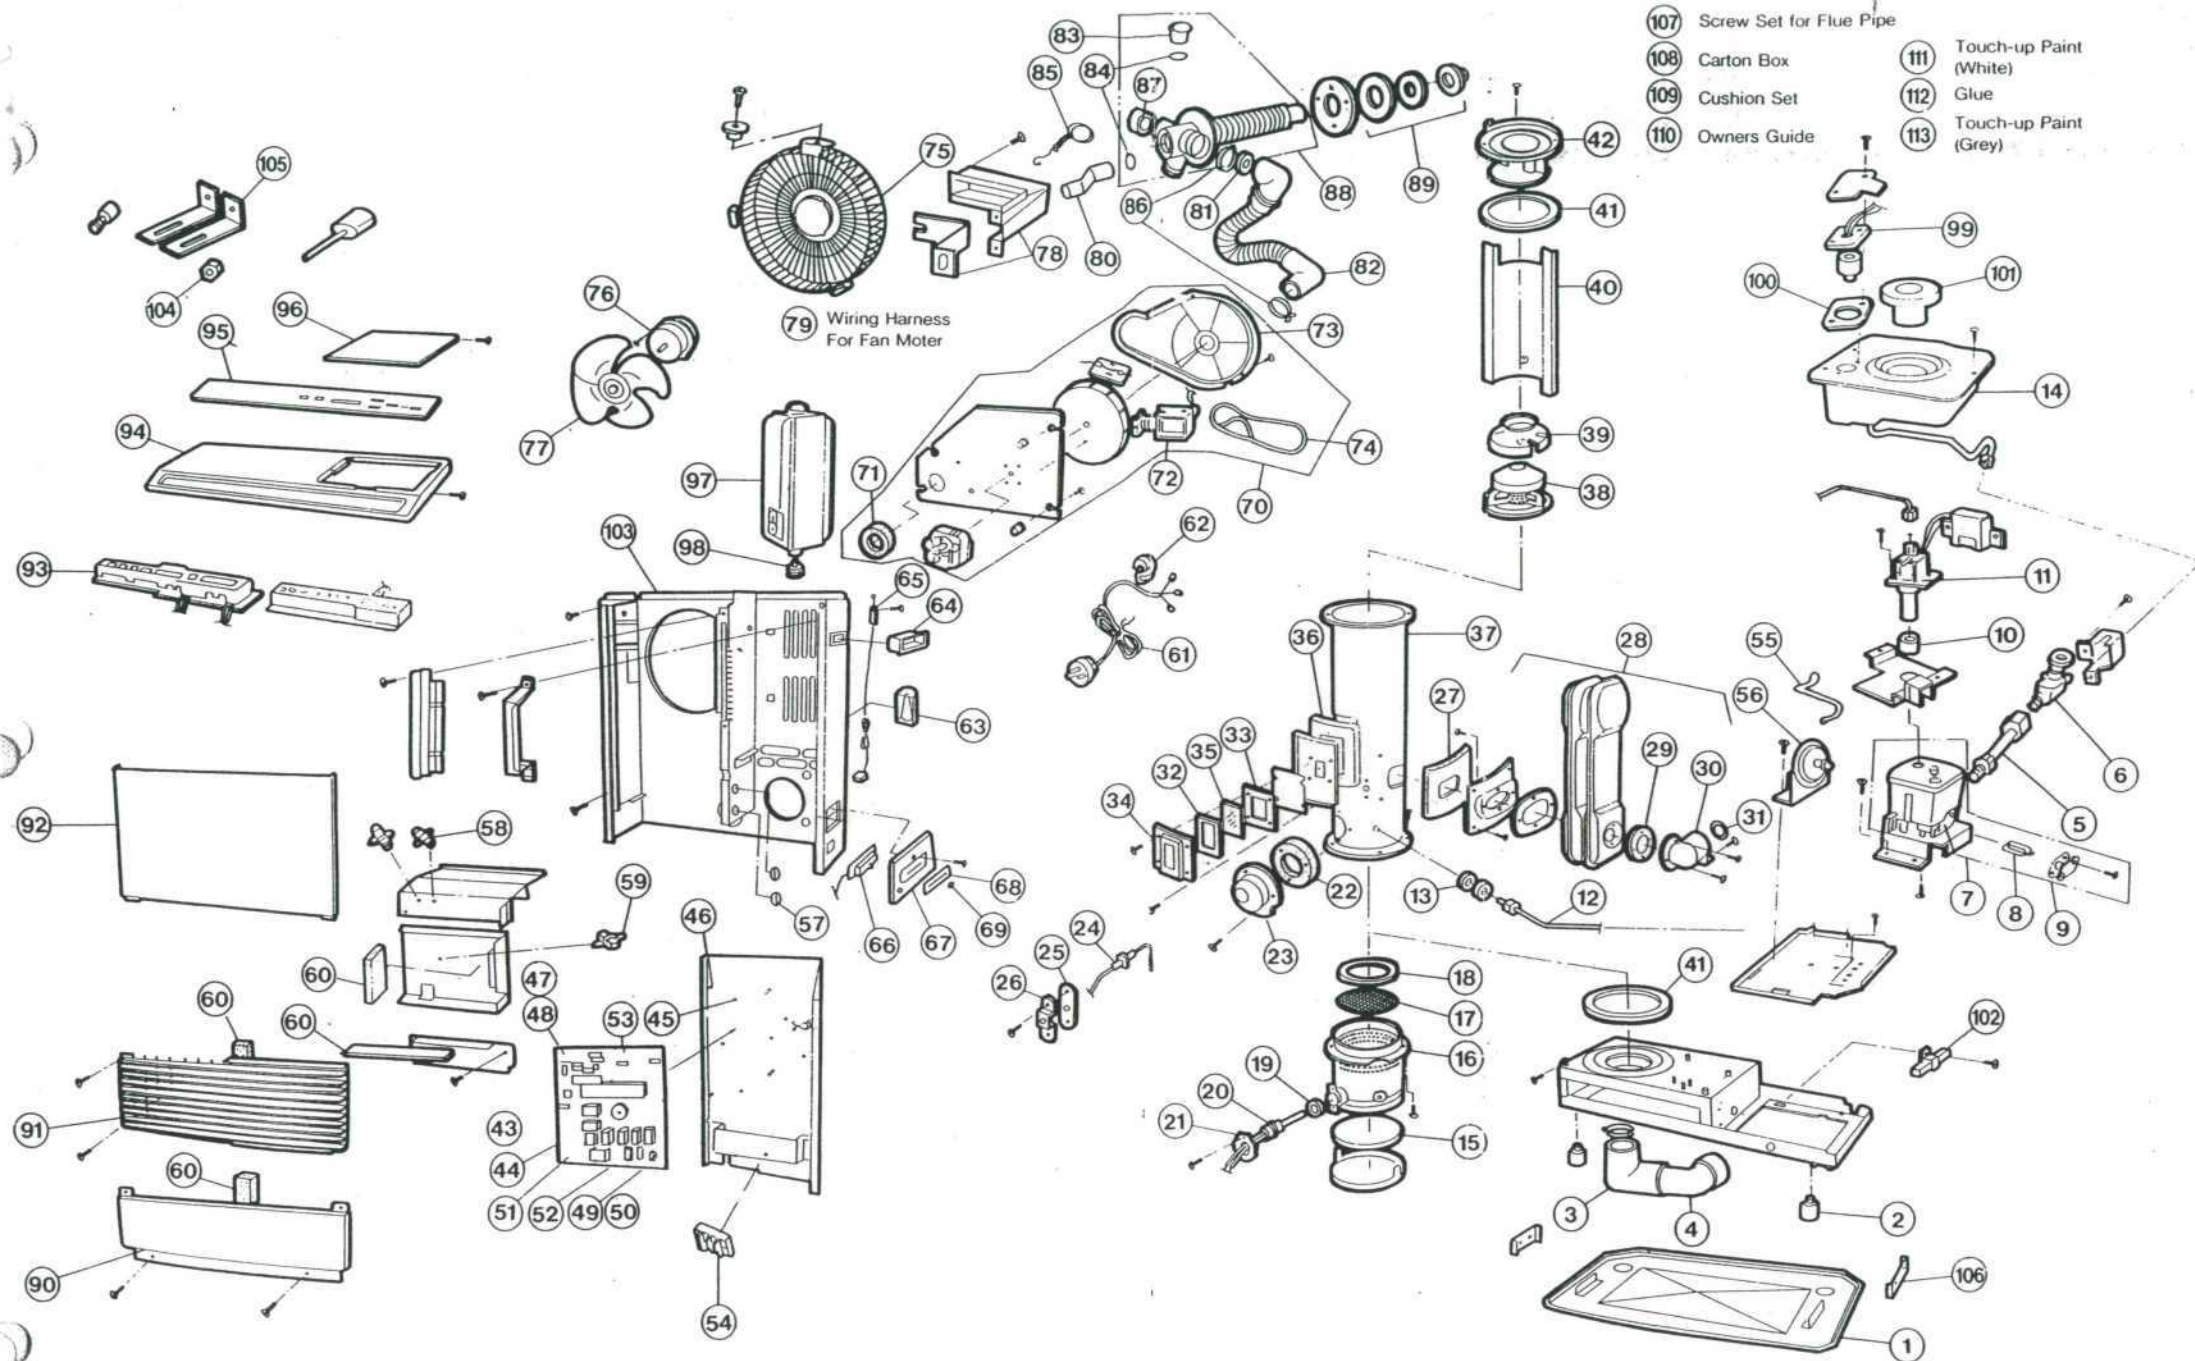

MONITOR 422 EXPLODED VIEW